



远端机前面板说明

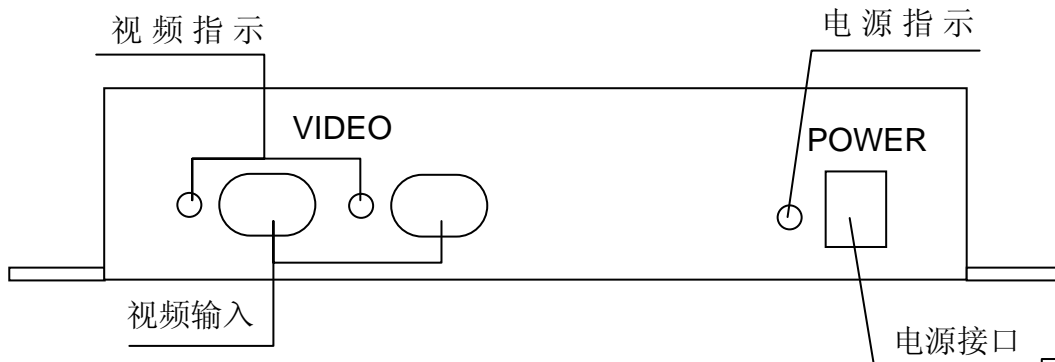


远端机后面板说明

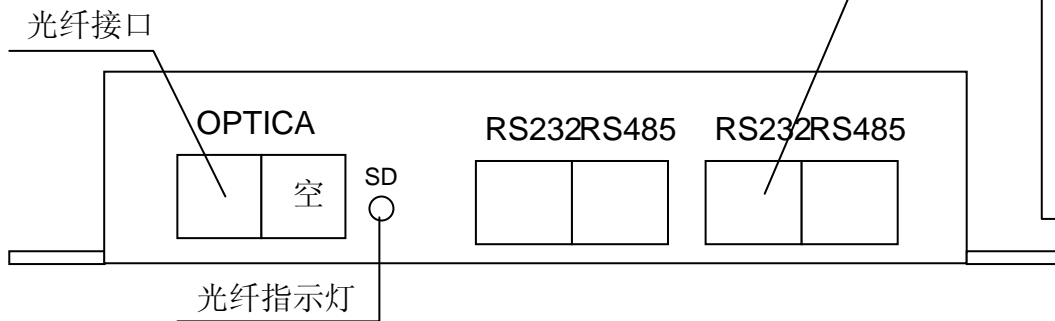


- RS232 接口定义:
- ①、T
 - ②、R
 - ③、扩展
 - ④、扩展
 - ⑤、GND
 - ⑦、扩展

局端机前面板说明

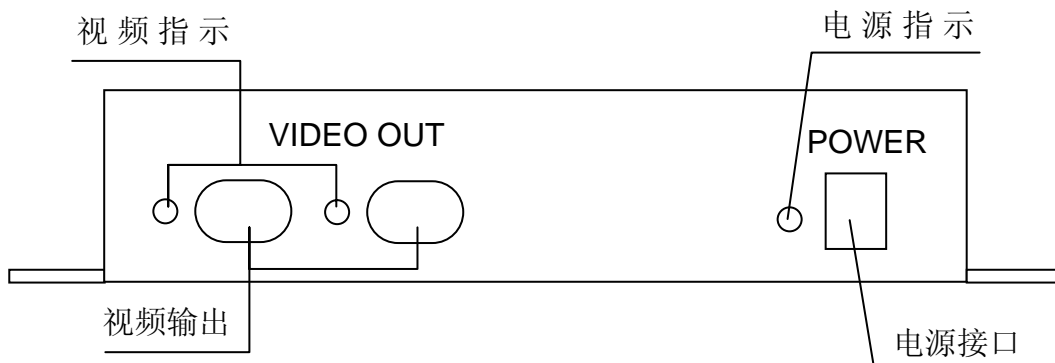

局端机后面板说明

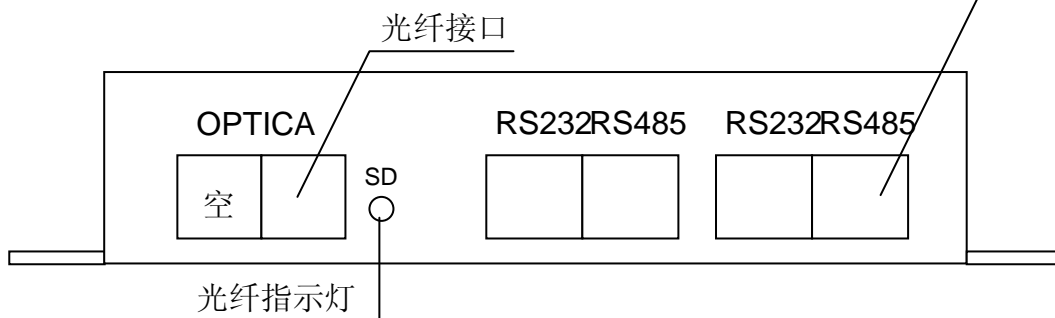

- RS-485 接口，从左至右，各端口定义如下:
- ① T+
 - ② T-
 - ③ R+
 - ④ R-
 - ⑤ 扩展
 - ⑥ 扩展
 - ⑦ 扩展